

FRAMED BEVELED MIRROR HANGING INSTRUCTIONS

1. Place the frame face down on a soft, protected surface
2. Determine whether you will be mounting the frame vertically or horizontally
3. Position each D-ring hanger (Fig. A) on the back side of the mirror frame (Fig B) an equal distance down from the frame's top edge. It is recommended they be mounted to the side frames and not the top frame.
4. Mark the center of the holes and then pre-drill for all screw holes to avoid splitting the wood.
Take care not to penetrate through to the front surface of the frame.
5. Install the D-ring hangers to the frame with the attached screws.
6. Hang the frame on appropriately sized hooks or wall anchors




Fig A

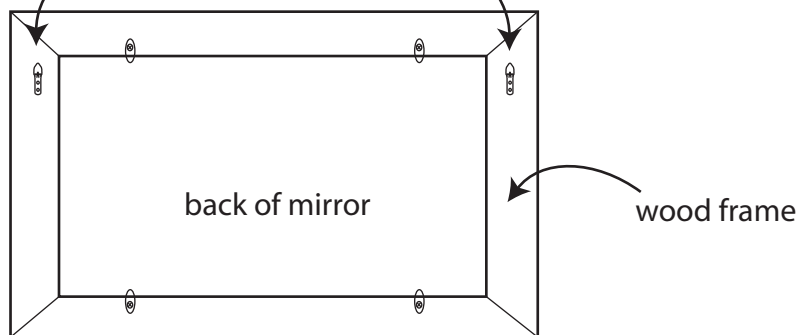
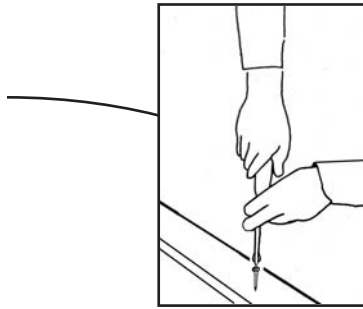


Fig B

If you have a particular question that is not addressed in these instructions please e-mail us via our web site at: