




**BEFORE YOU BEGIN PLEASE READ THESE SAFETY PRECAUTIONS**

- Consult professional help if you are unfamiliar with removing/installing bathroom cabinetry and working with associated plumbing hardware and tools.
- Installing a vanity cabinet and vanity top will require more than one person to do the job.

**Vanity Top Installation Instructions**


1. To make installation easier, attach faucets prior to positioning the top onto the cabinet. Follow the faucet manufacturer's instructions. When handling tools and other sharp, heavy objects during installation, use a protective covering to avoid scratching and damaging the top.
2. Apply a uniform bead of clear silicone sealant around the inside perimeter of the vanity cabinet prior to positioning the top into place. Avoid applying too much sealant where it will make contact with the cabinet's finish. The sealant and the downward pressure of the faucet and drain assembly will secure the top to the cabinet.
3. Carefully position the vanity top onto the cabinet. Have a soft cloth ready to wipe off any excess sealant should it compress over the edge and onto the finished sides. Attach applicable side splashes with clear silicone sealant.
4. Use clear silicone sealant on drain openings. Read all sealant manufacturer's instructions and warnings, some sealants like Plumber's Putty<sup>®</sup>, are not recommended for use with cultured marble product.

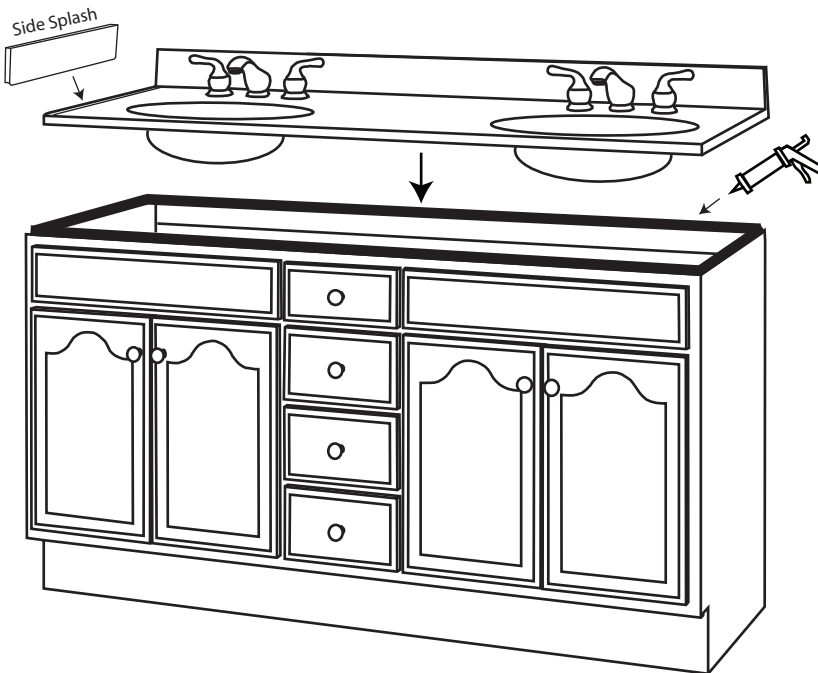


**Side Splashes**

Because of shrinkage that occurs during the curing process with all cultured marble product, it is impossible to guarantee side splashes will fit perfectly on our tops. Some sanding may be necessary to insure a good fit.

Left Profile View of a Side Splash

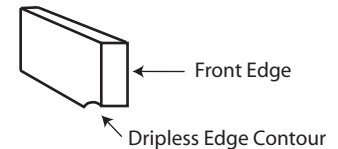

Front View of Vanity Top and a Right Side Splash

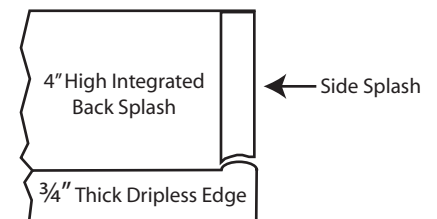

**About Cultured Tops:** Cultured marble, onyx and granite, because of its material, can slightly warp if stored improperly and/or left in hot/changing temperatures; all factors beyond our control after it leaves the factory. This is not a defect, just inherent properties and possibilities before it is properly installed. Slight warping is correctable prior to installation by placing the top on the cabinet and warming the affected area. Place some weight or clamp it down (protect the surface first) then allow it to cool back to normal room temperature.

There are no overflows in our bowls. They are not required, un-sanitary, Un-sightly, Un-gelcoated, and Un-necessary.

**Care and Cleaning Instructions**

**USE:** A soft sponge or cloth to absorb standing water and to wipe up water spots. To maintain and protect the gloss finish we suggest periodically applying a cleaner and restorer product like Gel Gloss<sup>®</sup>.

**DO NOT USE:** harsh, abrasive cleaners or brushes as these will scratch and dull the top. Avoid direct heat sources, and keep paint thinners, mineral spirits etc., away as they will damage the gel-coat.

If you have a particular question that is not addressed in these instructions please contact us via our web site at:

[www.jensonvanities.com](http://www.jensonvanities.com)